

Lightweight anti-ballistic shields

TenCate Targa-Light™ CX-400 TL VIP Briefcase

CX-400 TL - VIP BRIEFCASE

Product application	Tactical Anti-ballistic shield (briefcase)
Type of protective cover	Black textile
Composition	• HPPE
Dimensions	• 470 x 900 mm ± 5 mm (Deployed) • 470 x 350 mm ± 5 mm (Folded)
Protected Area	• 430 x 860 mm ± 5 mm
Weight	• 10,0 kg ± 0,5 kg
Shape	• Plan—Briefcase
Included features	• Moulded handle for hand held • Strap for shoulder held • Discreet textile handle and forearm sling for shield held • Metal quick release buckle to secure/deploy the shield • Velcro patch for identification • 2 storage pockets
Validity	11-10-2021



SPECIAL THREATS TESTED

Test temperature of 20°C
Multi hit (100 mm between shots)
• 7.62 x 39 PS-Ball MSC (720 m/s ± 10 m/s)
• 7.62 x 51 M80 (NIJ 0108.01, level III)
The above list of ammunition is not exhaustive and may not include threats that can be defeated by this product.

HANDLING

• Keep away from intense heat source
• Do not drop the shield on the floor and avoid hard shock(s)
• Do a visual inspection of the insert every six-month
• In case of visual damages, send the insert back for inspection / repair
• Do only clean with pure water or mild soap
• Use only as a shield, do not seat or walk on it

GUARANTEE PERIOD

The plate is expected to preserve its conformity with the specifications for a period of at least 5 years during storage from the date of delivery, provided that:

- The product is stored under dry conditions at normal ambient temperature
- The product has not been subjected to peak temperature exceeding 70°C
- The product is protected against long term direct exposure to sun light

Please find instructions for folding and unfolding on the next page.

Although TenCate Advanced Armour has used diligent care to ensure that the information provided in this document is accurate and up to date, TenCate Advanced Armour makes no representation or warranty, express or implied, as to the accuracy, reliability or complete-ness of the information. In no event shall TenCate Advanced Armour be liable for any damages arising from the reader's reliance upon, or use of, the information or materials contained in this document. The reader shall be solely responsible for any interpretation or use of this information and materials. The content of this document is subject to change without further notice. Please contact your TenCate Advanced Armour representative for more details.

UNFOLD THE BRIEFCASE

1. Hold the briefcase using the moulded handle or the discreet textile handle on the inner face.
2. Press both sides of the buckle (using thumb and forefinger).
3. Panels deploy under gravity.



FOLD THE BRIEFCASE

1. Lay the shield flat, inner face visible (face with the textile handle).
2. Lift the panel 1 from the panel 2.
3. Stack the panel 3 over the panel 2.
4. Start pushing the panel 2 and 3 under the panel 1. Watchout to put the metal buckle first.
5. Put the briefcase vertically and the 3 panels will enter in the textile cover.
6. Take the metal buckle and the tightening sling.
7. Clip the metal buckle.
8. Pull on the sling to tighten and obtain a good support of the panels inside the cover.



TENCATE
Targa-light™

PICTURES

